



# Thank You!

---

**You have successfully downloaded your document from Workbenchmagazine.com. Below are some tips for Trouble-Free Printing**

- 1)** Clear printer memory. If you are unable to print this document, turn off your printer for at least 15 seconds and try again.
  
- 2)** Print two or three pages at a time. If clearing the printer memory didn't help, try printing only two or three pages at one time, rather than sending the entire file
  
- 3)** If a document is required to be at an accurate scale set the page scaling option to "none" in your printer settings.
  
- 4)** Get advanced printer help. Visit Adobe Support for instructions in troubleshooting common printer problems.

<http://www.adobe.com/support/techdocs/316508.html>

## MATERIALS LIST



<b>A</b> (4) Legs	1 3/4 x 1 3/4 -25 1/4	<b>G</b> (1) Lower Back Rail	1 x 4 1/4 -16	<b>M</b> (1) Top	3/4 x 18 -20
<b>B</b> (2) Front Rails	3/4 x 1 9/16 -16	<b>H</b> (2) Side Starter Slats	5/8 x 5 3/16 -12 5/16	<b>N</b> (2) Spacers	1/2 x 1 3/4 -13 5/8
<b>C</b> (1) Front Apron	3/4 x 2 -16	<b>I</b> (4) Side Slats	5/8 x 4 13/16 -12 5/16	<b>O</b> (4) Kickers/Runners	3/4 x 3/4 -14 13/16
<b>D</b> (2) Upper Side Rails	1 x 5 1/16 -14 5/16	<b>J</b> (1) Back Starter Slats	5/8 x 5 11/16 -12 5/16	<b>P</b> (2) Drawer Front/Back	1/2 x 3 1/2 -14 15/16
<b>E</b> (2) Lower Side Rails	1 x 4 1/4 -14 5/16	<b>K</b> (2) Back Slats	5/8 x 5 5/16 -12 5/16	<b>Q</b> (2) Drawer Sides	1/2 x 3 1/2 -14 5/16
<b>F</b> (1) Upper Back Rail	1 x 5 1/16 -16	<b>L</b> (1) Shelf	3/4 x 16 -16 5/8	<b>R</b> (1) Drawer Bottom	1/4 x 14 15/16 -14 3/8

## CUTTING DIAGRAM

3/4 x 4 - 60 CHERRY




5/4 x 5 1/2 - 96 CHERRY

 


4/4 x 5 1/2 - 96 CHERRY



4/4 x 7 1/4 - 96 CHERRY

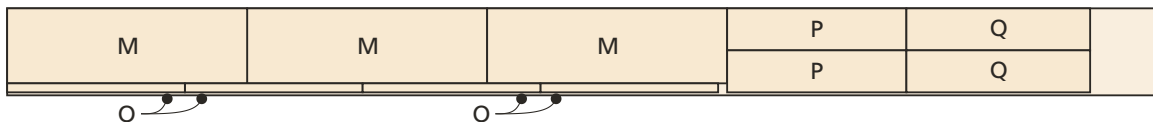

**$\frac{1}{4}$  x 7 $\frac{1}{4}$  - 96 CHERRY** **$\frac{1}{4}$  x 24 x 24 CHERRY PLYWOOD**