

# Thank You!

You have successfully downloaded your document from Workbenchmagazine.com. Below are some tips for Trouble-Free Printing

- 1) Clear printer memory. If you are unable to print this document, turn off your printer for at least 15 seconds and try again.
- **2)** Print two or three pages at a time. If clearing the printer memory didn't help, try printing only two or three pages at one time, rather than sending the entire file
- **3)** If a document is required to be at an accurate scale set the page scaling option to "none" in your printer settings.
- **4)** Get advanced printer help. Visit Adobe Support for instructions in troubleshooting common printer problems.

http://www.adobe.com/support/techdocs/316508.html

Issue 285 Volu

Volume 60

Number 5

September/October 2004

#### **MATERIALS LIST**



MATERIALS & HARDWARE										
Part		Qty	T	W	L	Material				
Α	Rails	2	3/4"	41/2"	21"	Cherry Hardwood				
В	Stiles	2	3/4"	<b>2</b> ½"	30"	Cherry Hardwood				
С	Back	1	1⁄4"	21"	22"	Hardboard				
D	Тор Сар	1	3/4"	11/2"	27"	Cherry Hardwood				
Е	Bottom Cap	1	3/4"	11/2"	26"	Cherry Hardwood				

(10) Turnbuttons (Rockler #27912)\* Flush-Mount Hangers (Rockler #29975)\* (2) Shaker Pegs (Rockler #23382)\* Beveled-Edge Mirror (20%" x 21%")





## **CUTTING DIAGRAM**

### 3/4 x 61/2 - 84" CHERRY

В		Δ	Α		
В		7			
F		D			

#### 1/4 x 24 - 24" HARDBOARD

