

Thank You!

You have successfully downloaded your document from Workbenchmagazine.com. Below are some tips for Trouble-Free Printing

- 1) Clear printer memory. If you are unable to print this document, turn off your printer for at least 15 seconds and try again.
- **2)** Print two or three pages at a time. If clearing the printer memory didn't help, try printing only two or three pages at one time, rather than sending the entire file
- **3)** If a document is required to be at an accurate scale set the page scaling option to "none" in your printer settings.
- **4)** Get advanced printer help. Visit Adobe Support for instructions in troubleshooting common printer problems.

http://www.adobe.com/support/techdocs/316508.html

workbench Café Table Pattern

Issue 304 Volume 63 Number 6 December 2007

Pattern at $2\frac{1}{2}$ " = 1'0"









































