



Thank You!

You have successfully downloaded your document from Workbenchmagazine.com. Below are some tips for Trouble-Free Printing

 
 
- 1)** Clear printer memory. If you are unable to print this document, turn off your printer for at least 15 seconds and try again.

- 2)** Print two or three pages at a time. If clearing the printer memory didn't help, try printing only two or three pages at one time, rather than sending the entire file


- 3)** If a document is required to be at an accurate scale set the page scaling option to "none" in your printer settings.

- 4)** Get advanced printer help. Visit Adobe Support for instructions in troubleshooting common printer problems.


<http://www.adobe.com/support/techdocs/316508.html>

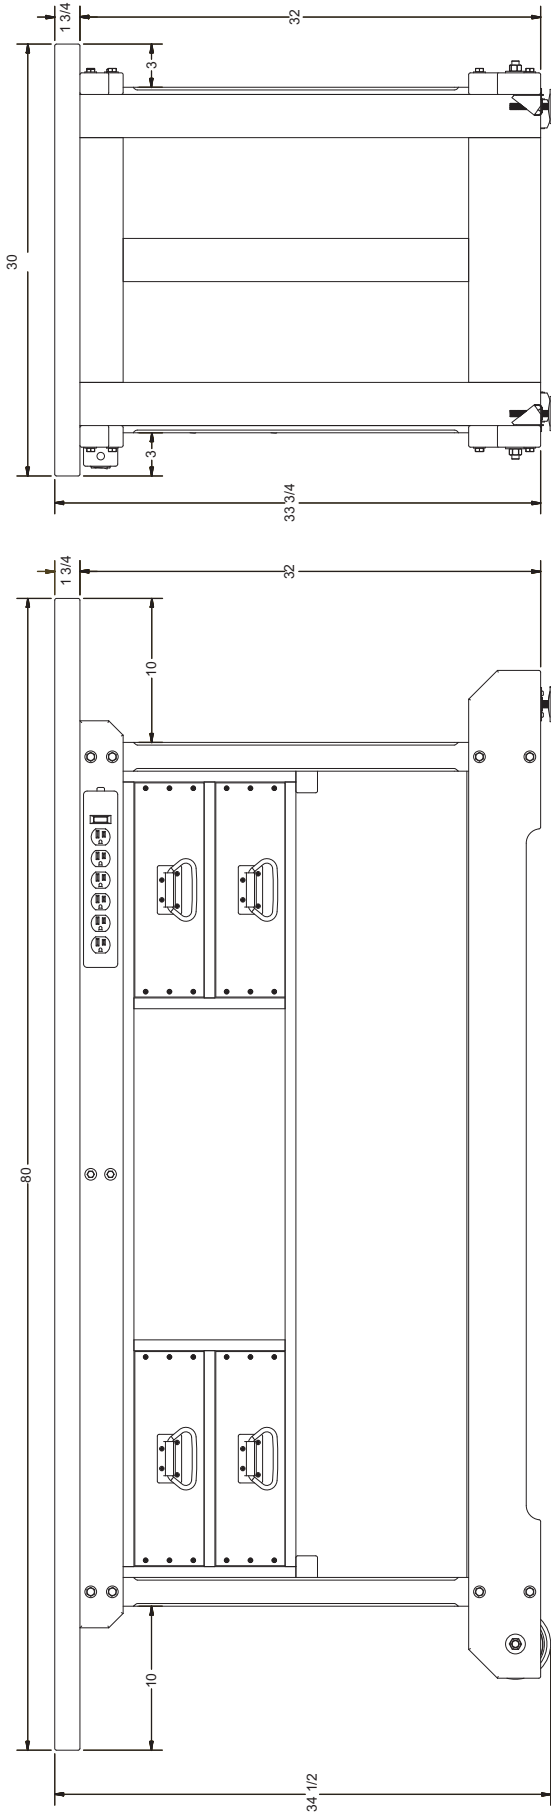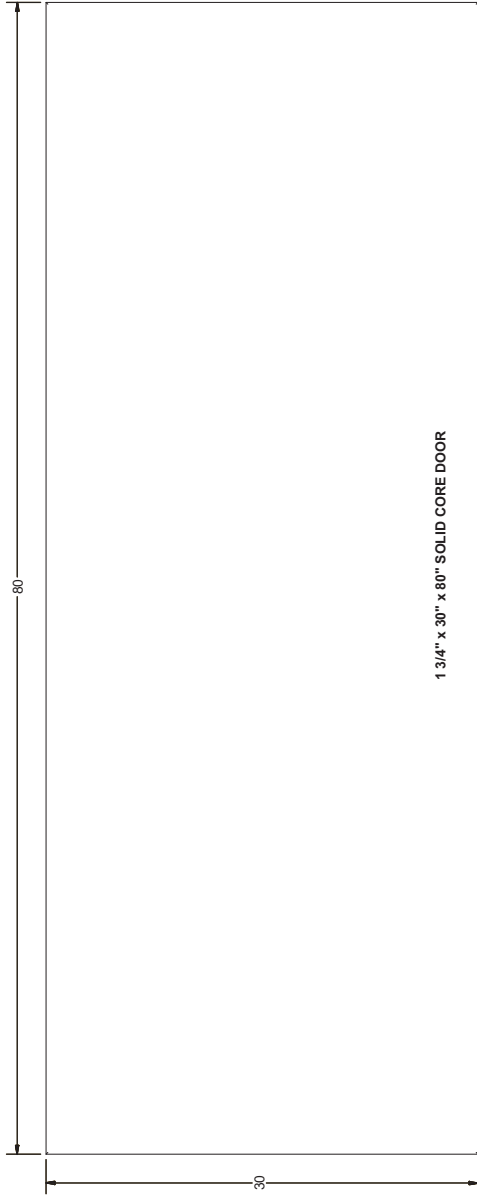


BENCH WITH CASE

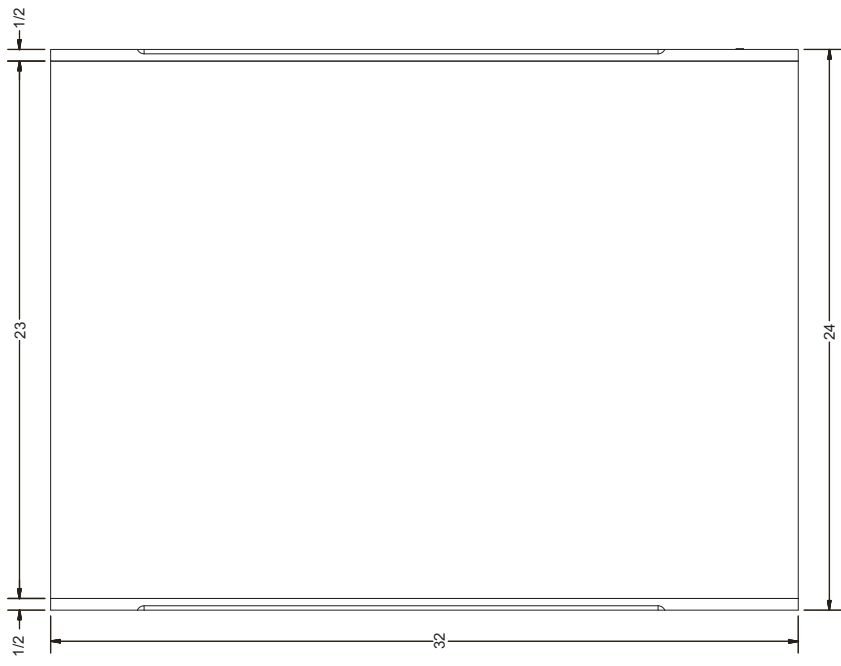 


END PANEL
(INSIDE VIEW)





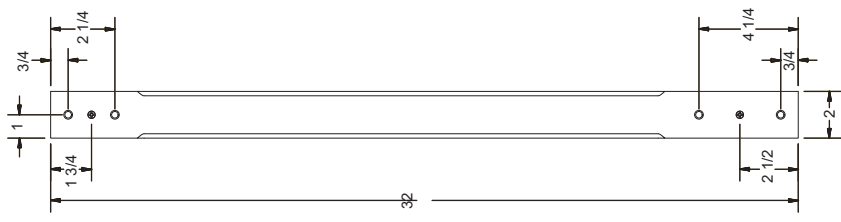 


END PANEL
(END VIEW)


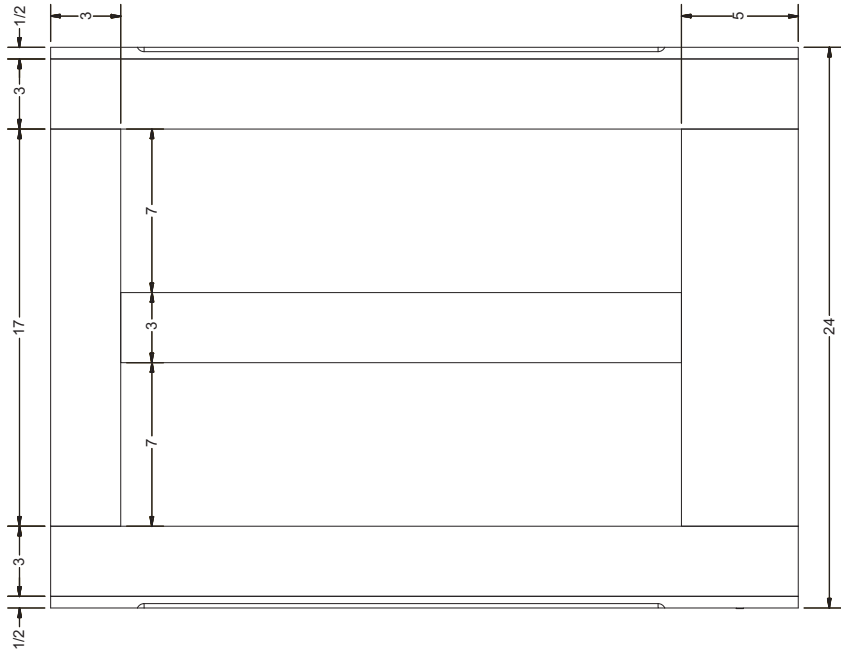 


END PANEL
(OUTSIDE VIEW)

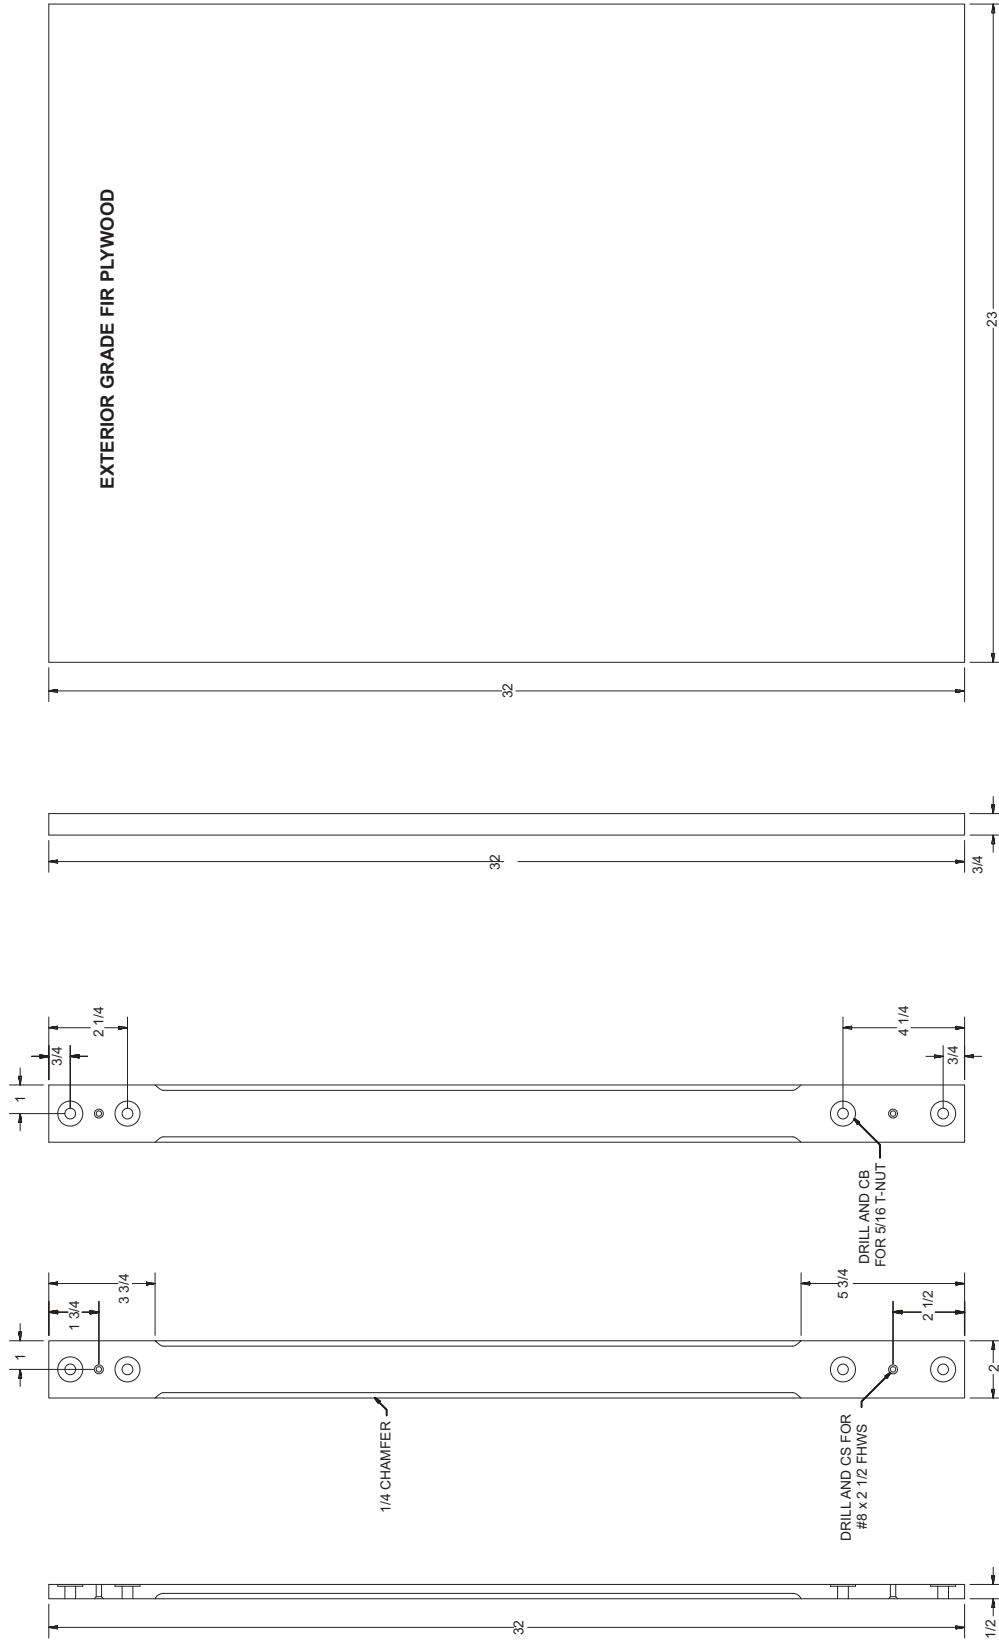 


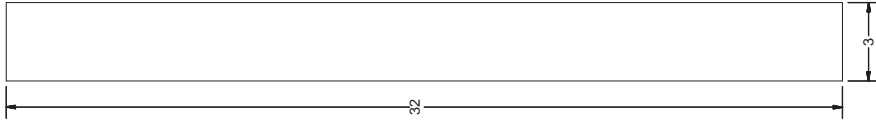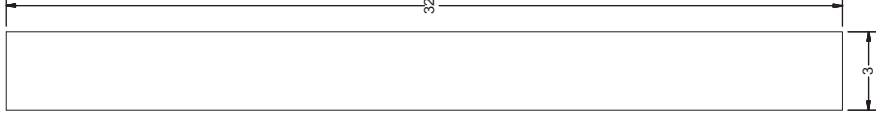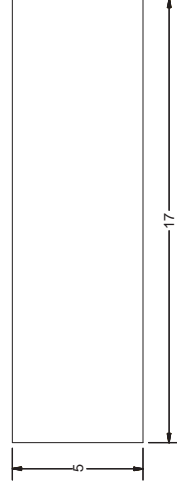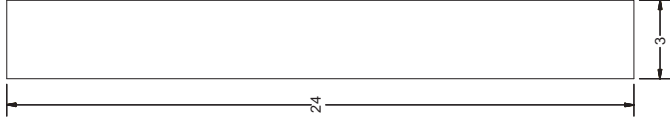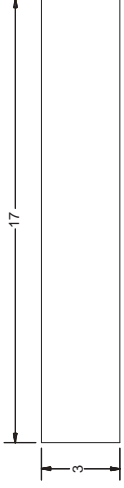     

  
END PANEL OVERLAY STRIPS
(ALL 1/2 POPLAR)

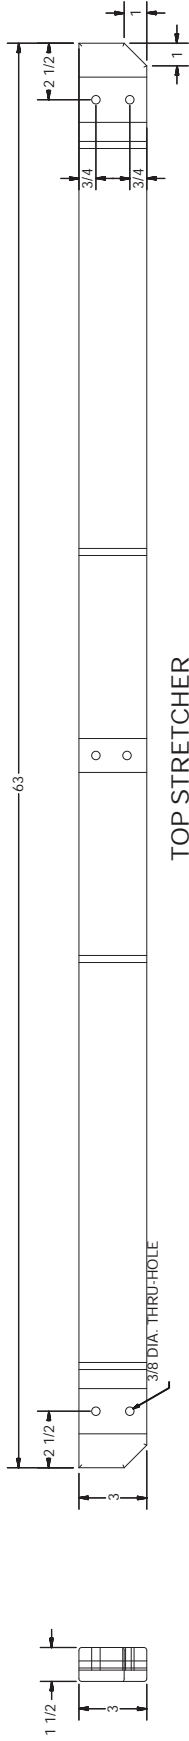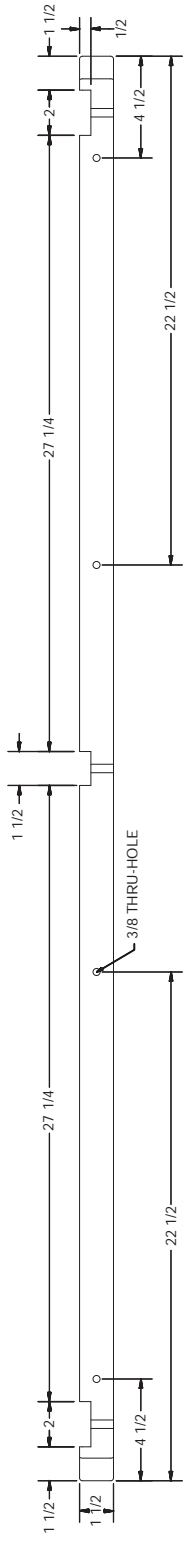

TOP STRETCHER

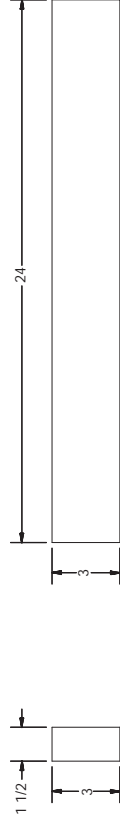 


TOP SUPPORT BRACE

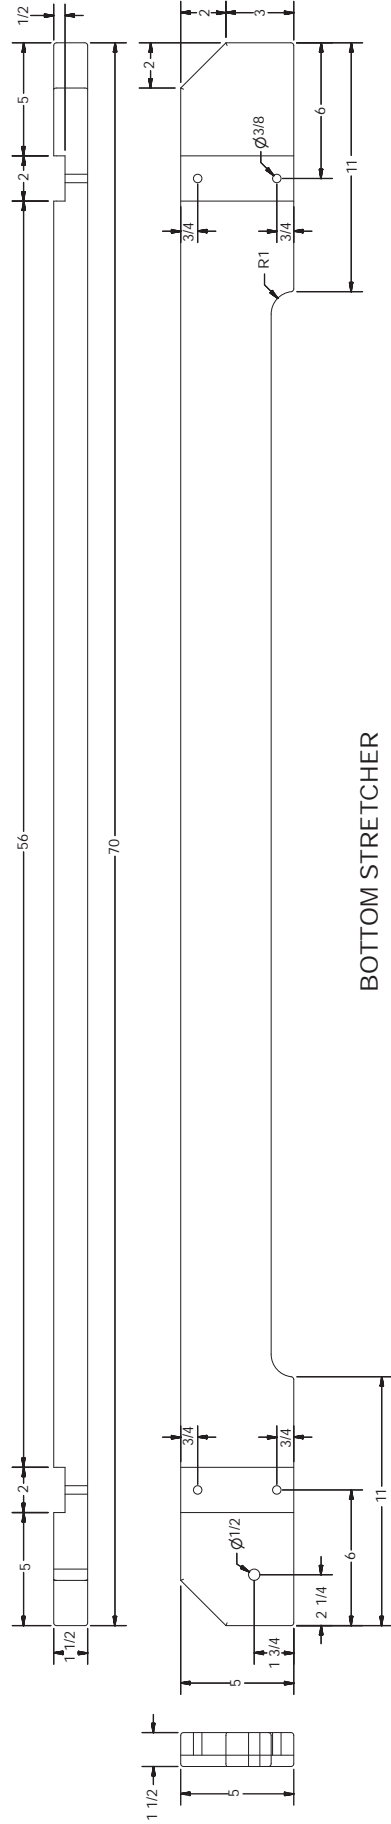 


BOTTOM STRETCHER

 
R1/8

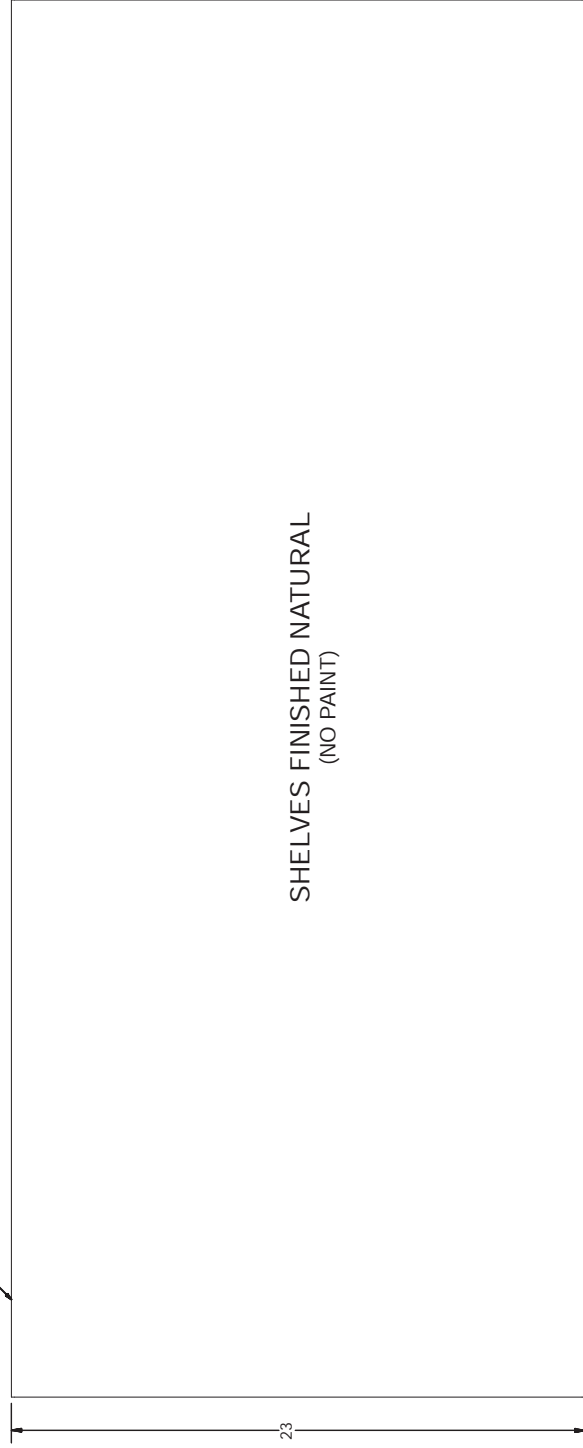


SHELVES FINISHED NATURAL
(NO PAINT)




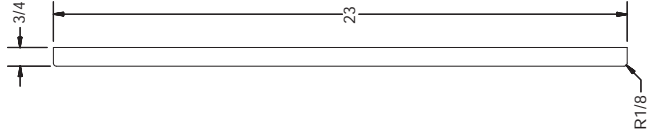 


BOTTOM SHELF


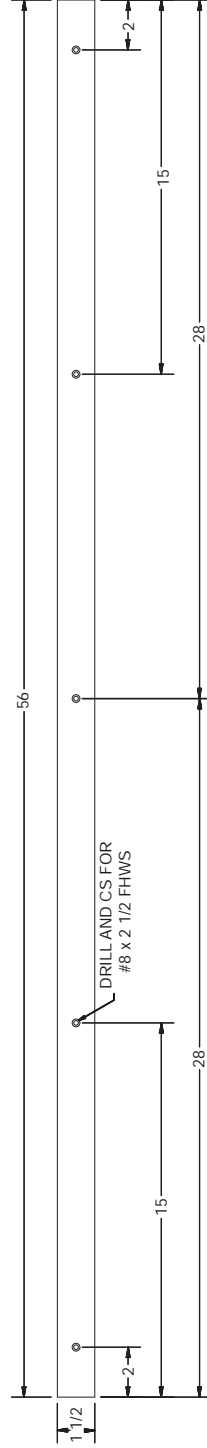 


BOTTOM SHELF CLEAT


 


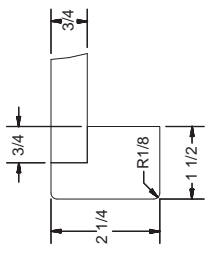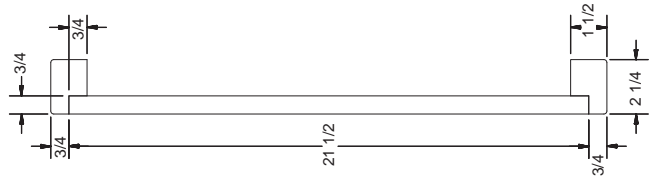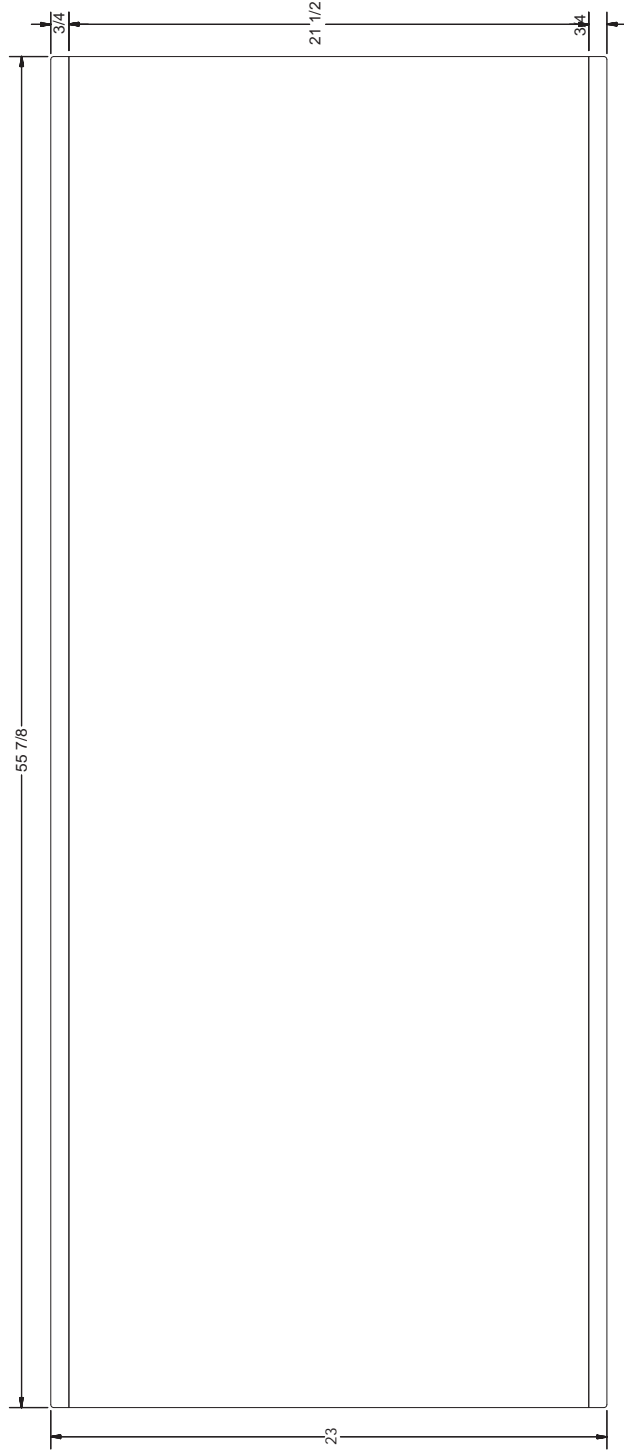    



SHELF

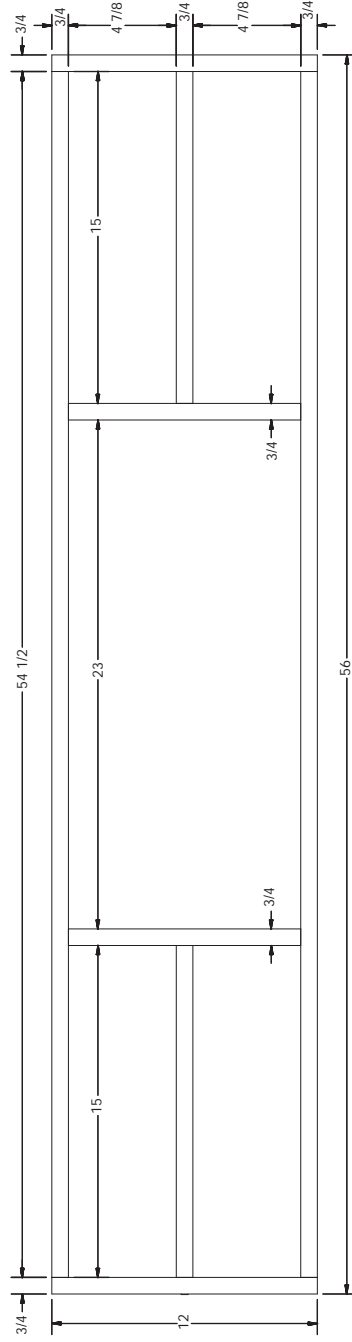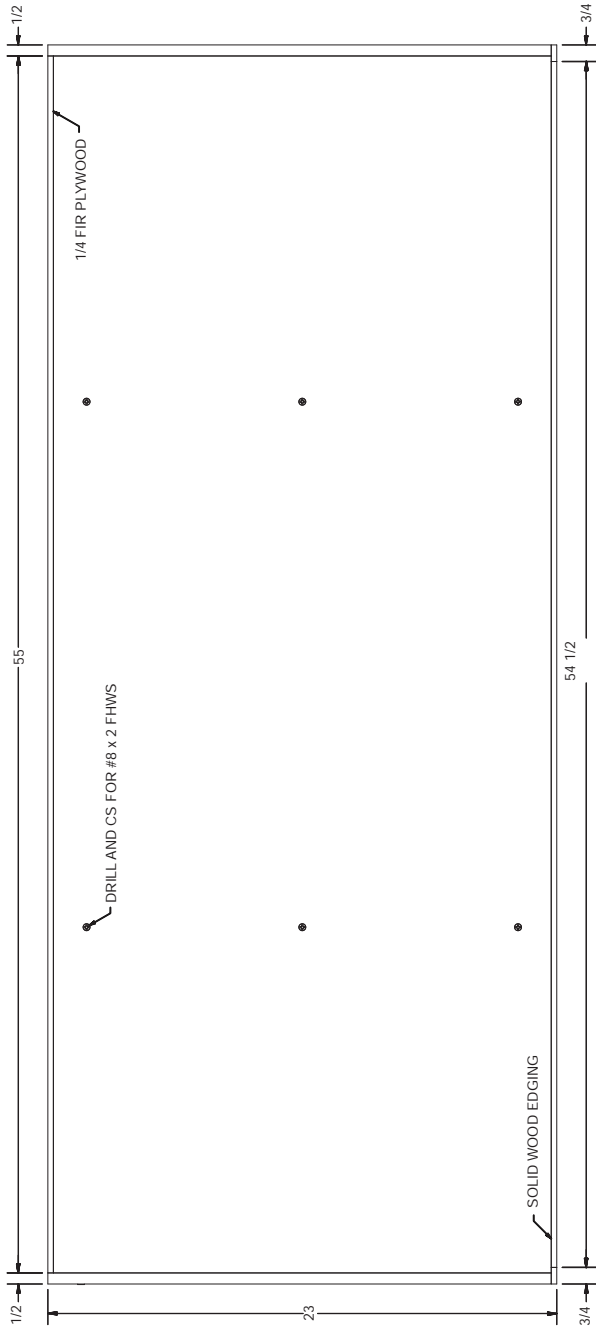  




CASE

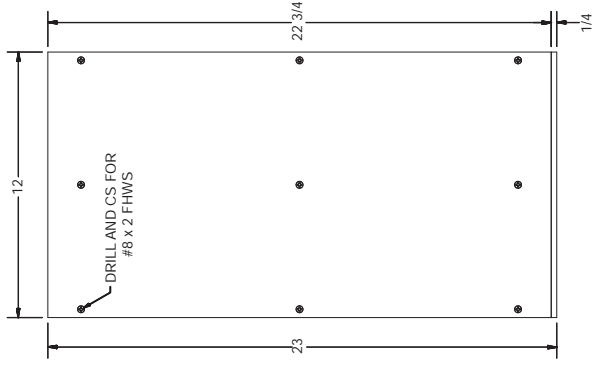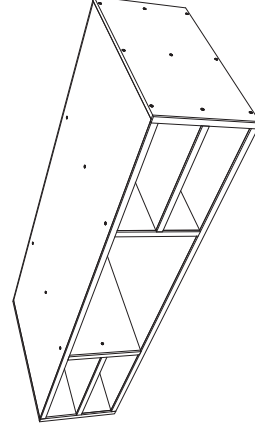  

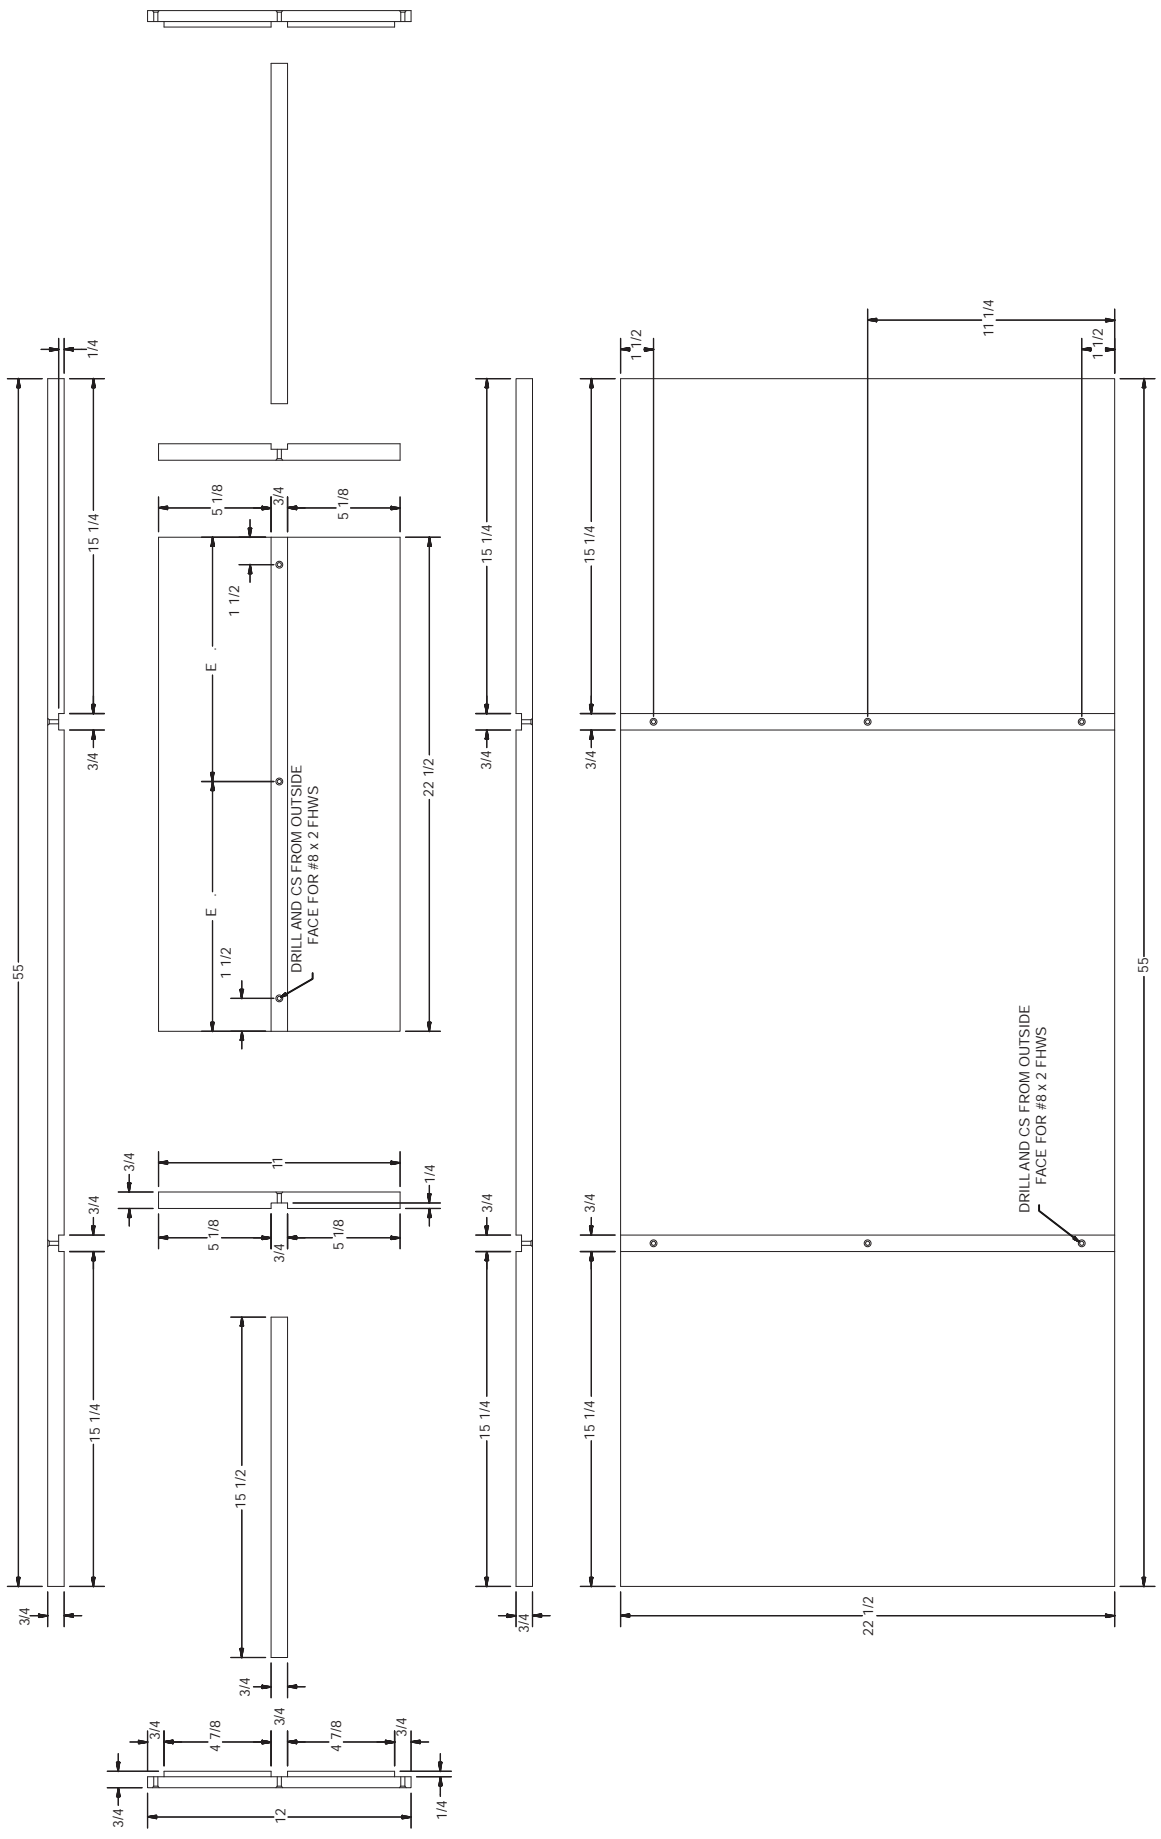 

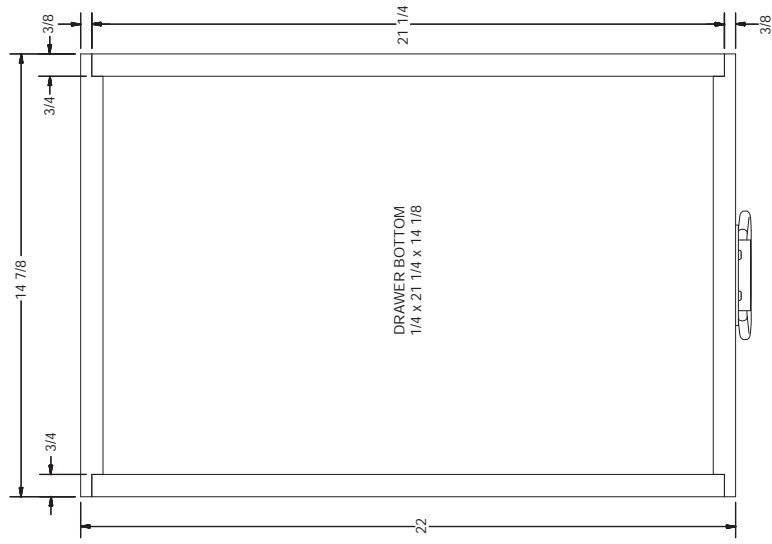 

DRAWER BOTTOM
1/4 x 21 1/4 x 14 7/8

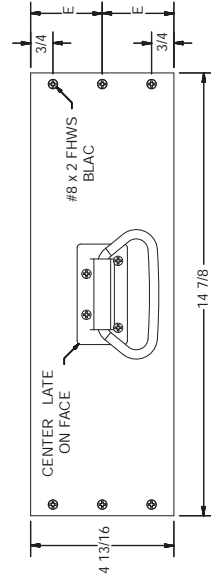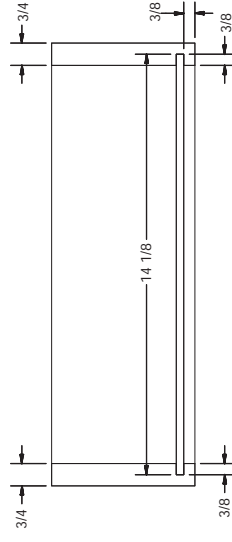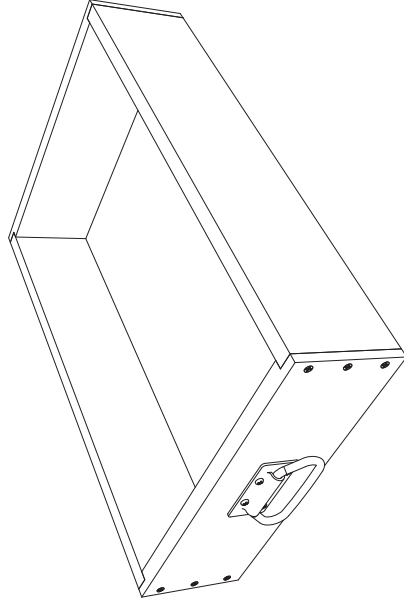   

DRAWER