



Thank You!

You have successfully downloaded your document from Workbenchmagazine.com. Below are some tips for Trouble-Free Printing

- 1)** Clear printer memory. If you are unable to print this document, turn off your printer for at least 15 seconds and try again.

- 2)** Print two or three pages at a time. If clearing the printer memory didn't help, try printing only two or three pages at one time, rather than sending the entire file

- 3)** If a document is required to be at an accurate scale set the page scaling option to "none" in your printer settings.

- 4)** Get advanced printer help. Visit Adobe Support for instructions in troubleshooting common printer problems.

<http://www.adobe.com/support/techdocs/316508.html>

MATERIALS LIST



PLANTER BOX

- A (4) Corner Posts (cedar) 2" x 2" x 15³/₈"
- B (6) End Rails (cedar) 1¹/₁₆" x 5¹/₈" x 12¹/₄"
- C (6) Frt./Bk. Rails (cedar) 1¹/₁₆" x 5¹/₈" x 39¹/₂"
- D (2) Cleats (cedar) 1¹/₁₆" x 1¹/₂" x 39"
- E (13) Slats (cedar) 3/4" x 1¹/₂" x 12³/₄"
- F (2) End Trim (cedar) 3/4" x 2³/₈" x 16¹/₂"
- G (1) Front Trim (cedar) 3/4" x 2³/₈" x 43³/₄"
- H (1) Back Trim (cedar) 3/4" x 2³/₈" x 43³/₄"


TRELLIS

- I (2) Posts (cedar) 2³/₄" x 2³/₄" x 54¹/₂"
- J (1) Cap (cedar) 3¹/₂" x 3¹/₂" x 45"
- K (2) Frame Stiles (cedar) 1¹/₂" x 2" x 35"
- L (2) Frame Rails (cedar) 2" x 2¹/₄" x 30¹/₂"



HARDWARE

- (12) 5/16 x 5" Construction Lag Screws
- (28) 5/16 x 3¹/₂" Construction Lag Screws
- (48) #8 x 1¹/₂" Fh Exterior Woodscrews
- (7) Copper Refrig. Tubing 3/8" O.D. x 54"


CUTTING DIAGRAM

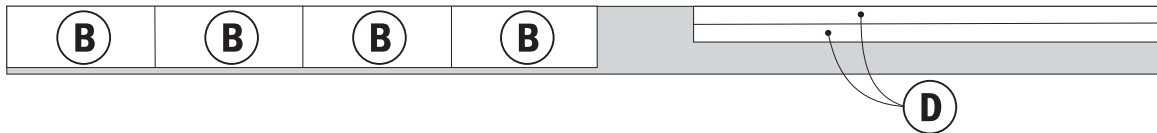


1¹/₁₆ x 5¹/₂ - 96

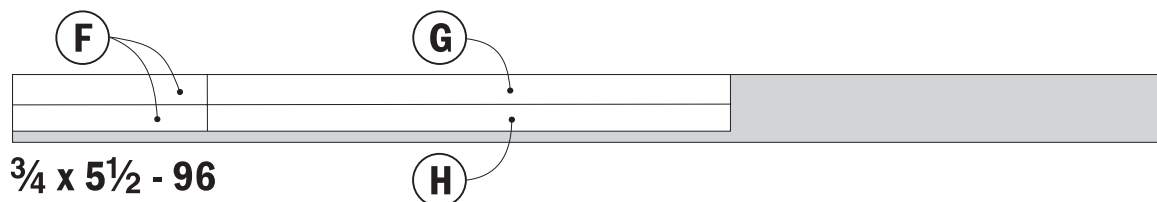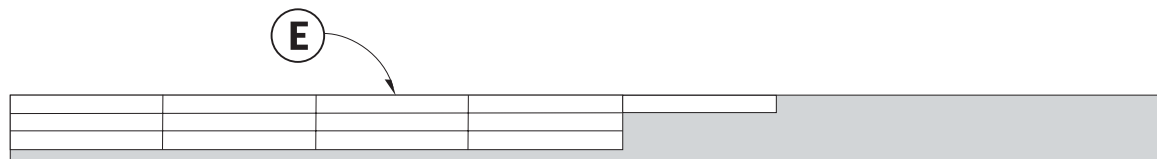

3/4 x 5¹/₂ - 96

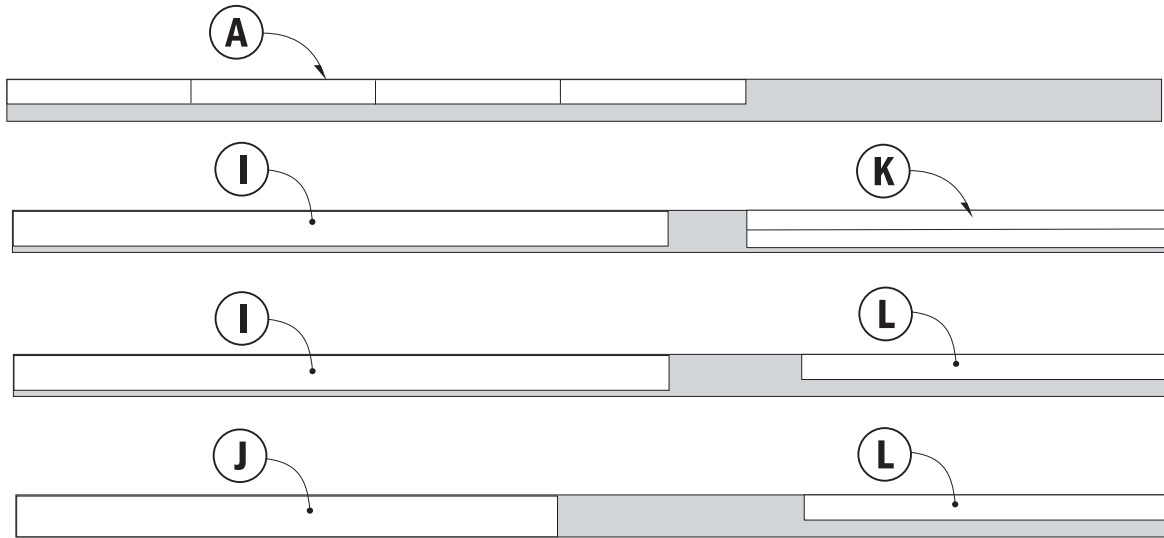

3 1/2 x 3 1/2 - 96

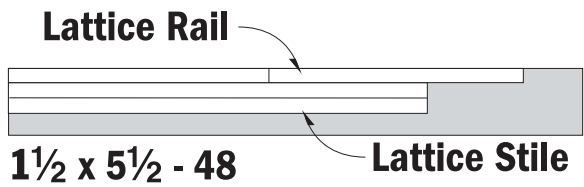

1 1/2 x 5 1/2 - 48