



Thank You!

You have successfully downloaded your document from Workbenchmagazine.com. Below are some tips for Trouble-Free Printing

- 1)** Clear printer memory. If you are unable to print this document, turn off your printer for at least 15 seconds and try again.
- 2)** Print two or three pages at a time. If clearing the printer memory didn't help, try printing only two or three pages at one time, rather than sending the entire file
- 3)** If a document is required to be at an accurate scale set the page scaling option to "none" in your printer settings.
- 4)** Get advanced printer help. Visit Adobe Support for instructions in troubleshooting common printer problems.

<http://www.adobe.com/support/techdocs/316508.html>




workbench® Cedar & Stone Welcome Mat






Issue 306 Volume 64 Number 2

April 2008






- 1/4" Concrete Backer Board is attached with exterior landscaping caulk/adhesive
- 1/2" x 1/4" Rabbet on back of mat for backer board
- Wood joints are attached with pocket screws (1 1/4" S.S.)

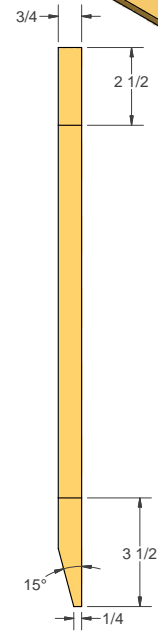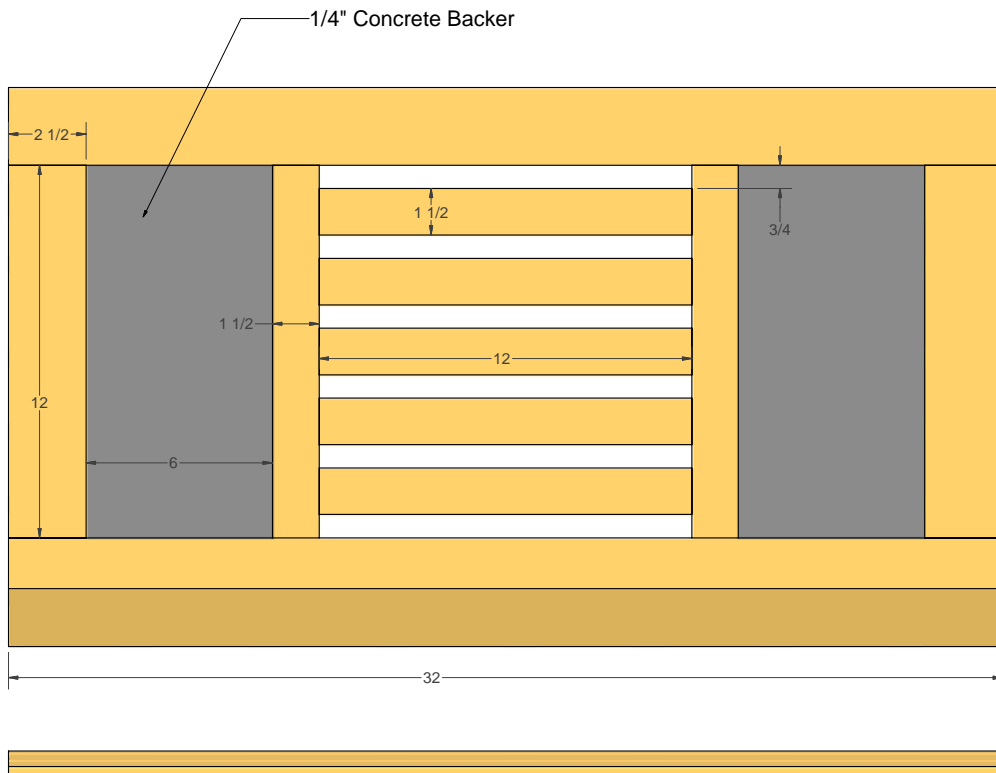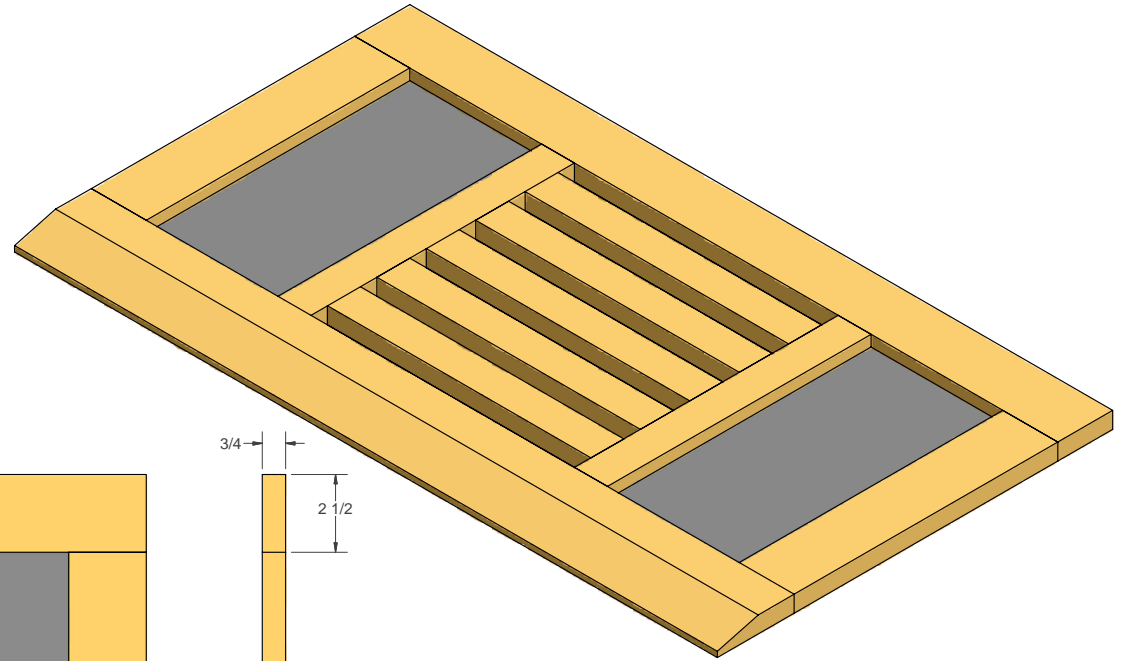


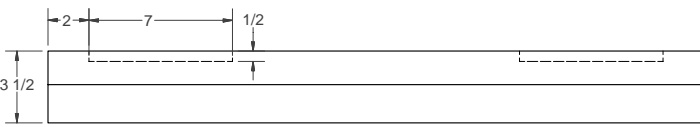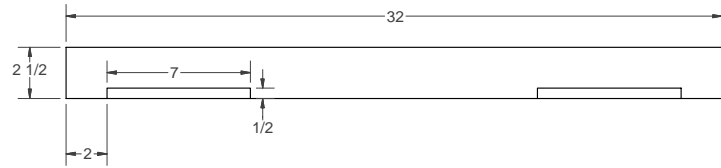


-Wood Joints connected with 1 1/4" stainless steel Pocket Screws
 -Backer Board Fastened with exterior landscape caulk/construction adhesive

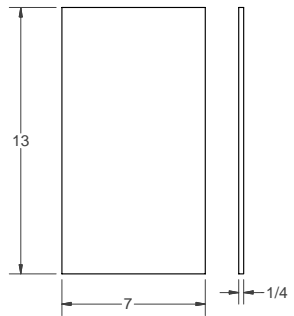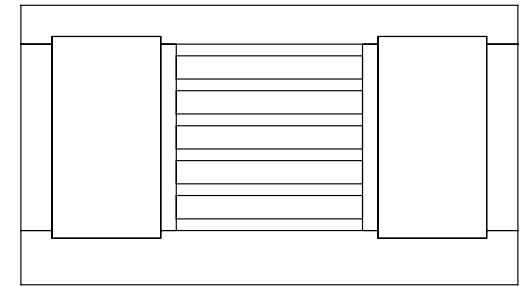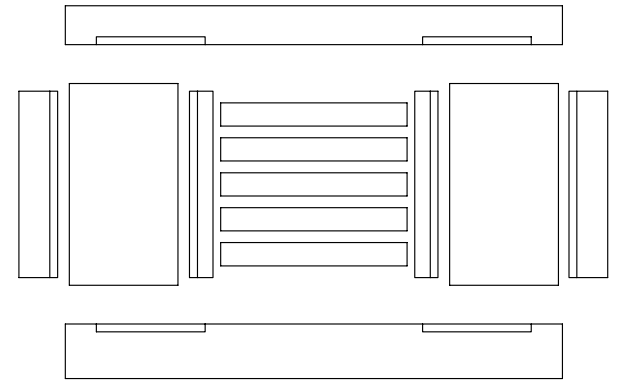


1/4" Concrete Backer Board (2)

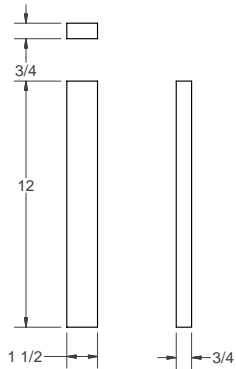

Mid-Rails (5)

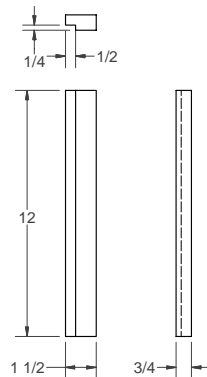

Mid-Stile (2)

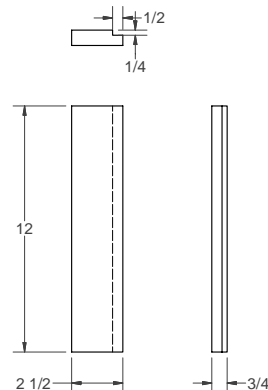

3/4